CONNECTING A RADIO/CASSETTE PLAYER AND THE CD PLAYER TO THE SAME SPEAKERS

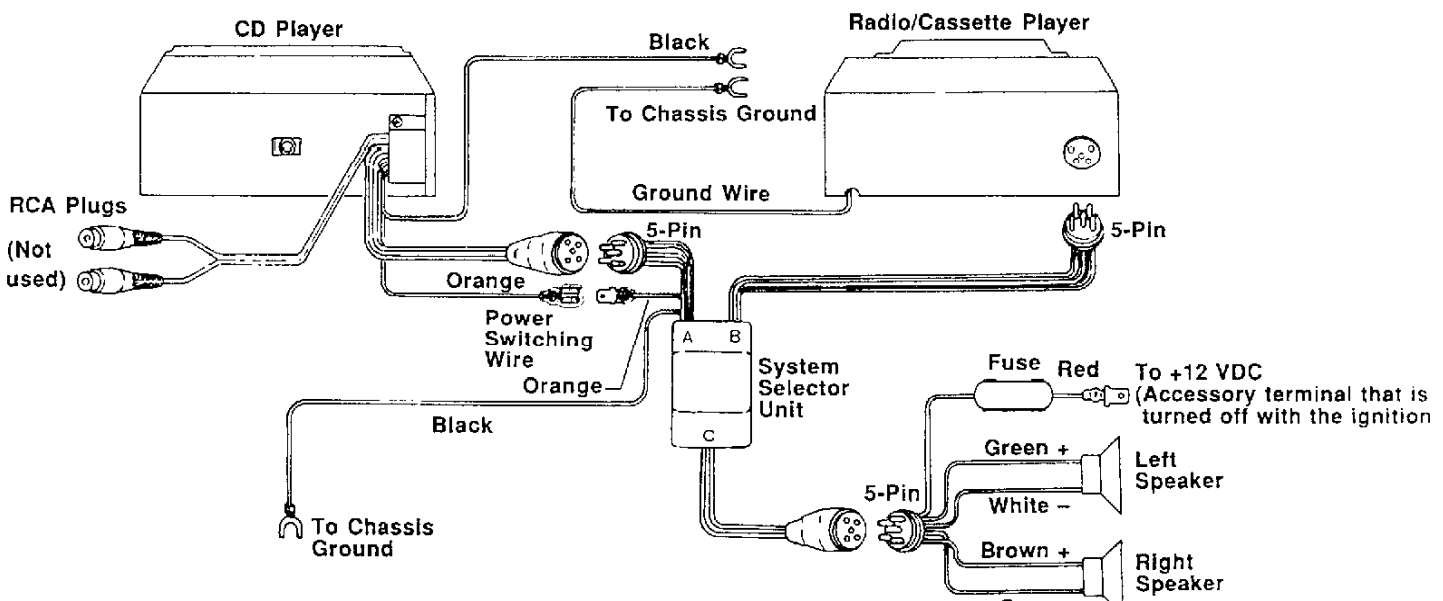

CONNECTING THE CD PLAYER TO 2 SPEAKERS

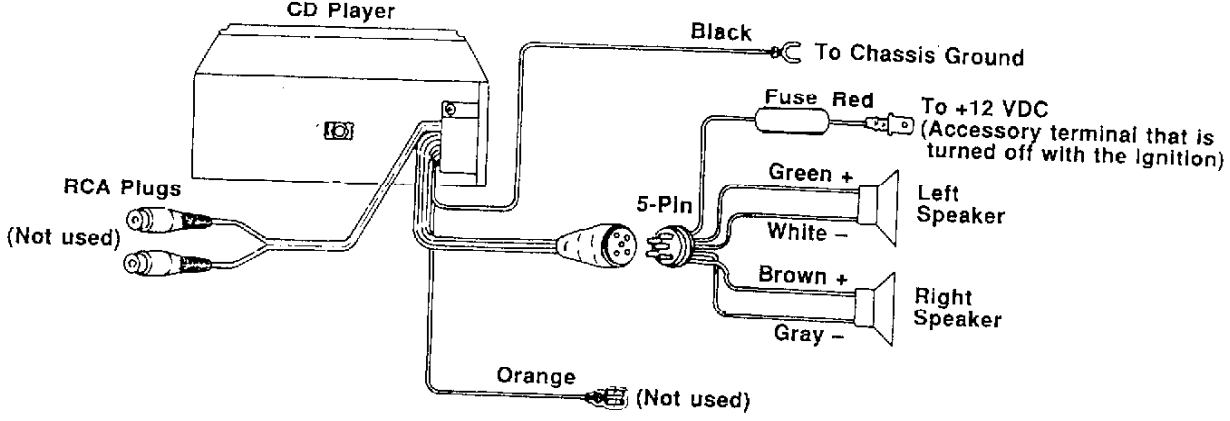

CONNECTING THE CD PLAYER TO 4 SPEAKERS

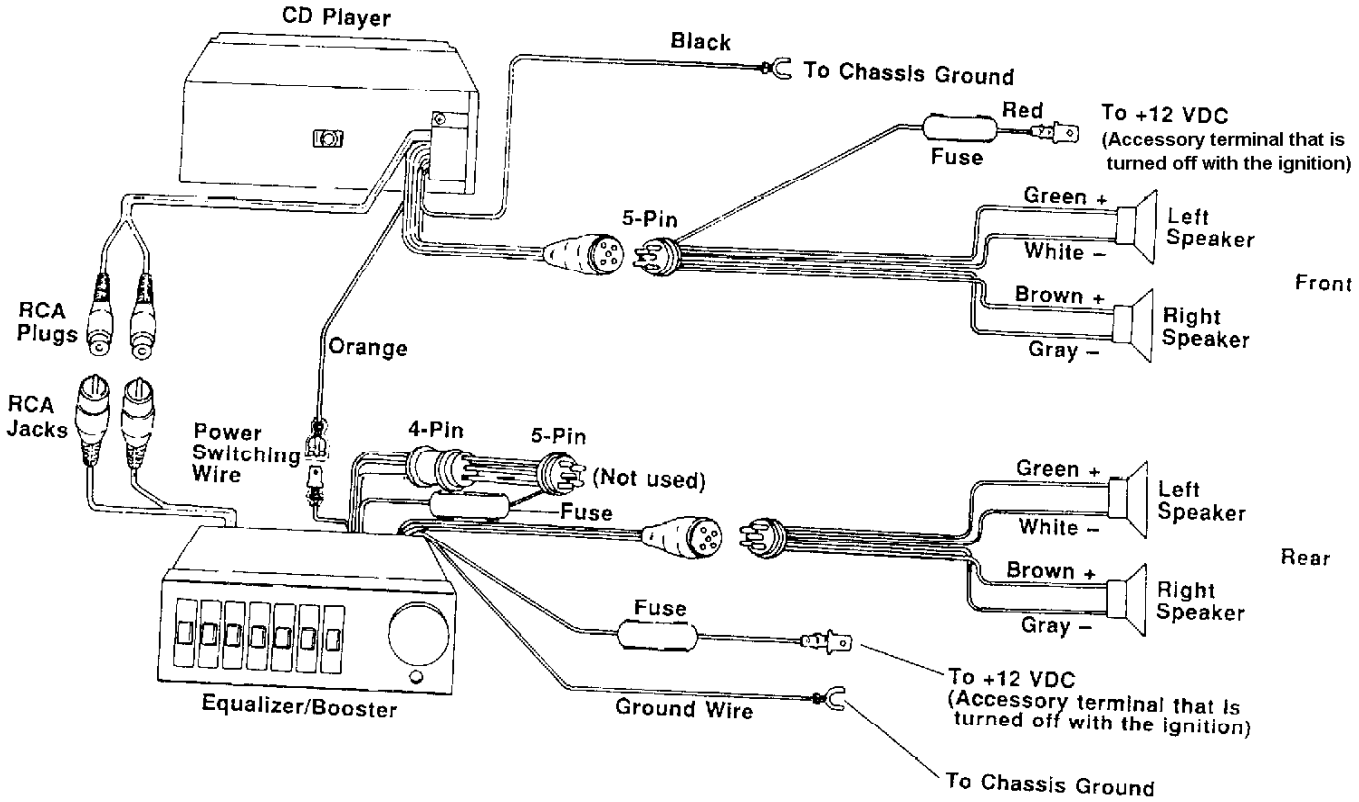

CONNECTING THE CD PLAYER TO AN EQUALIZER/BOOSTER USING RCA PLUGS

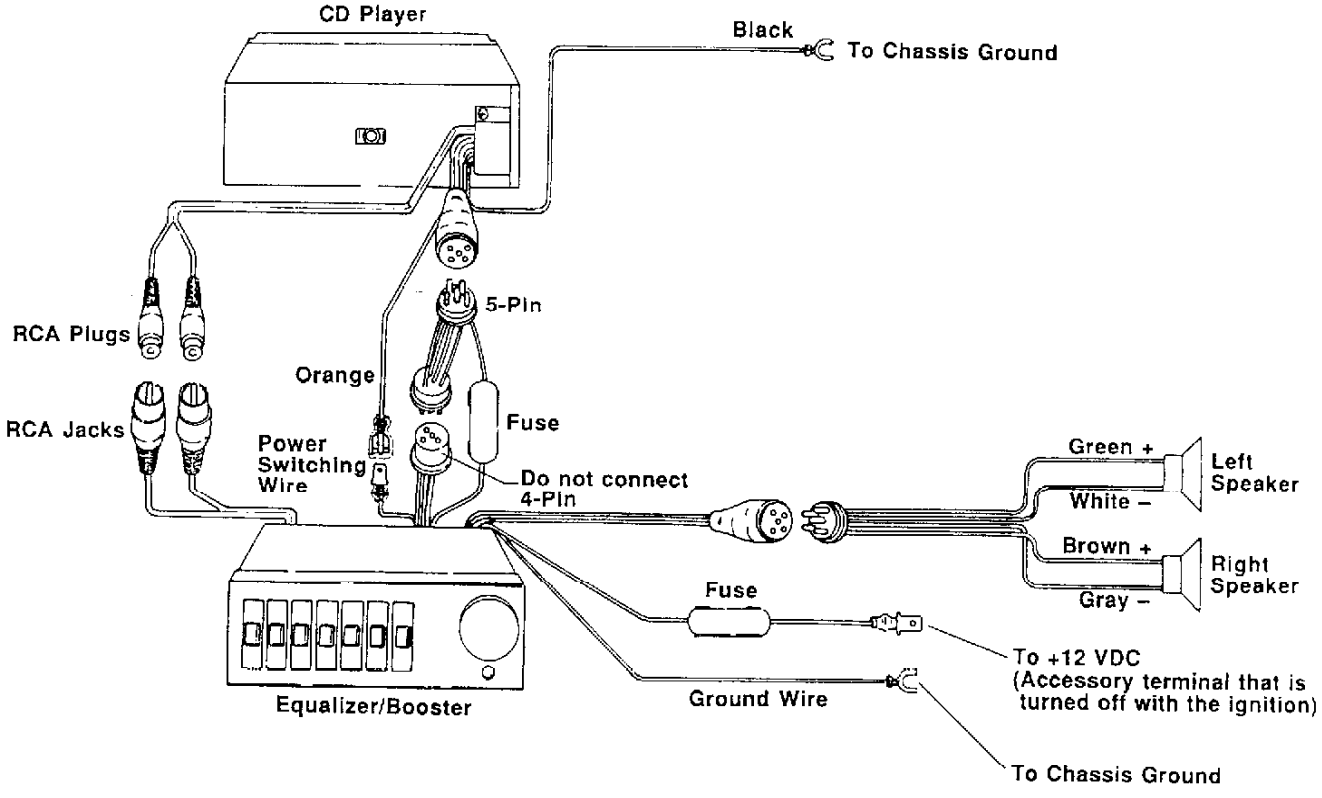

CONNECTING THE CD PLAYER TO AN EQUALIZER/BOOSTER USING THE 5-PIN CONNECTOR

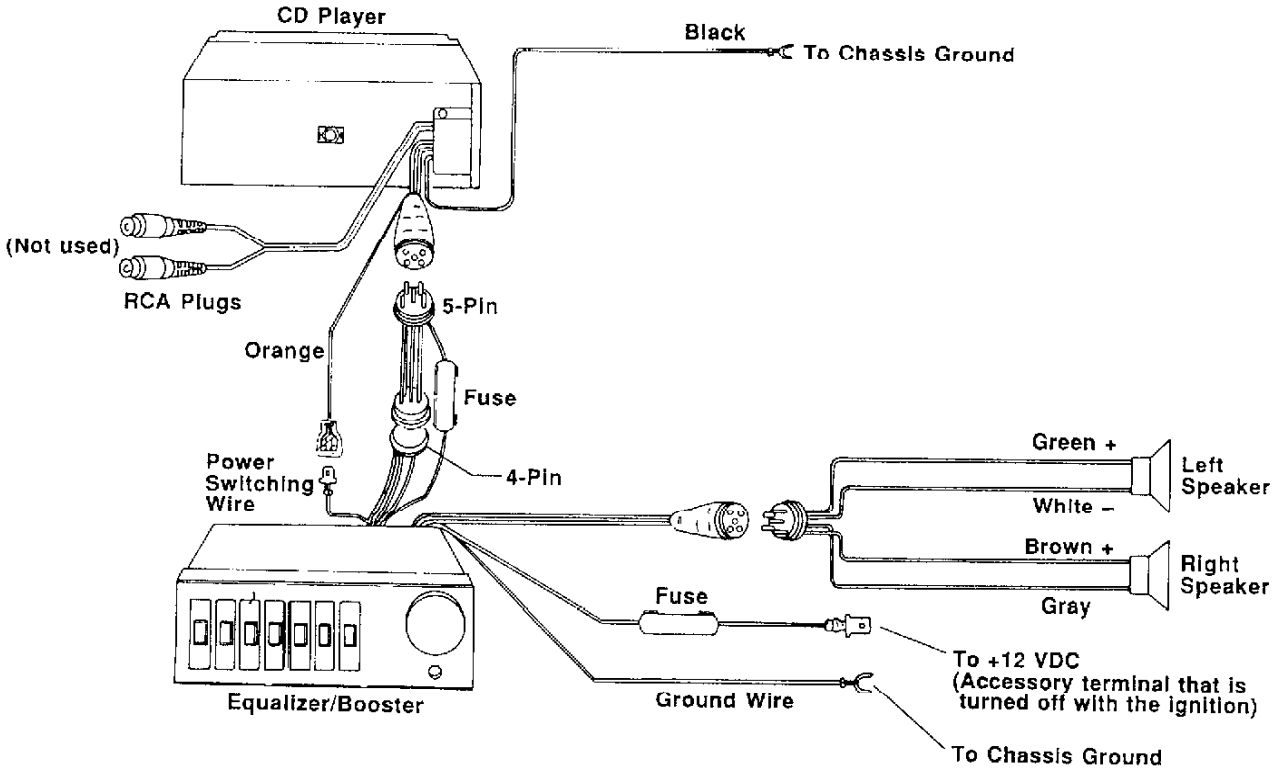
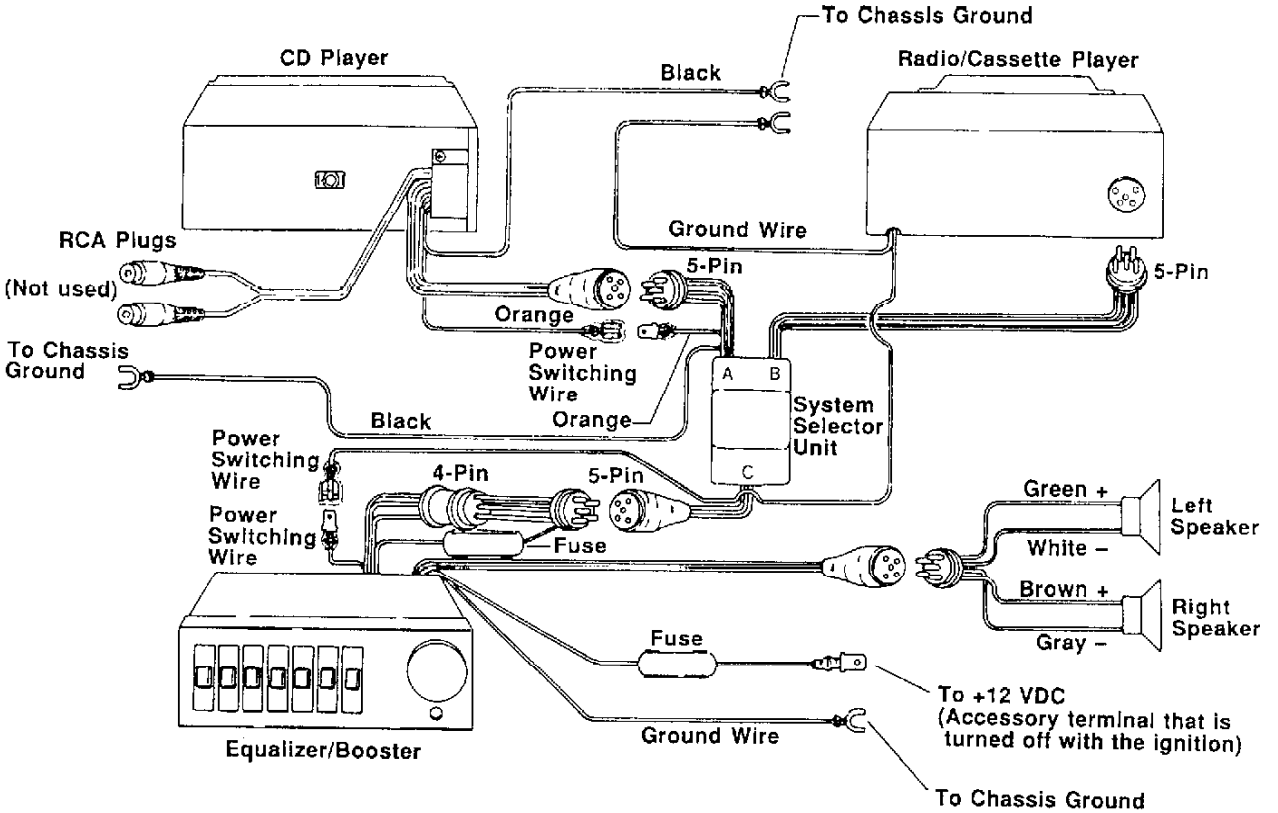
Connecting the CD Player and a Radio/Cassette Player To An Equalizer/Booster